


# SucceX-Force 5.8GHz

25mW/100mW/400mW/800mW


## Wiring Diagram

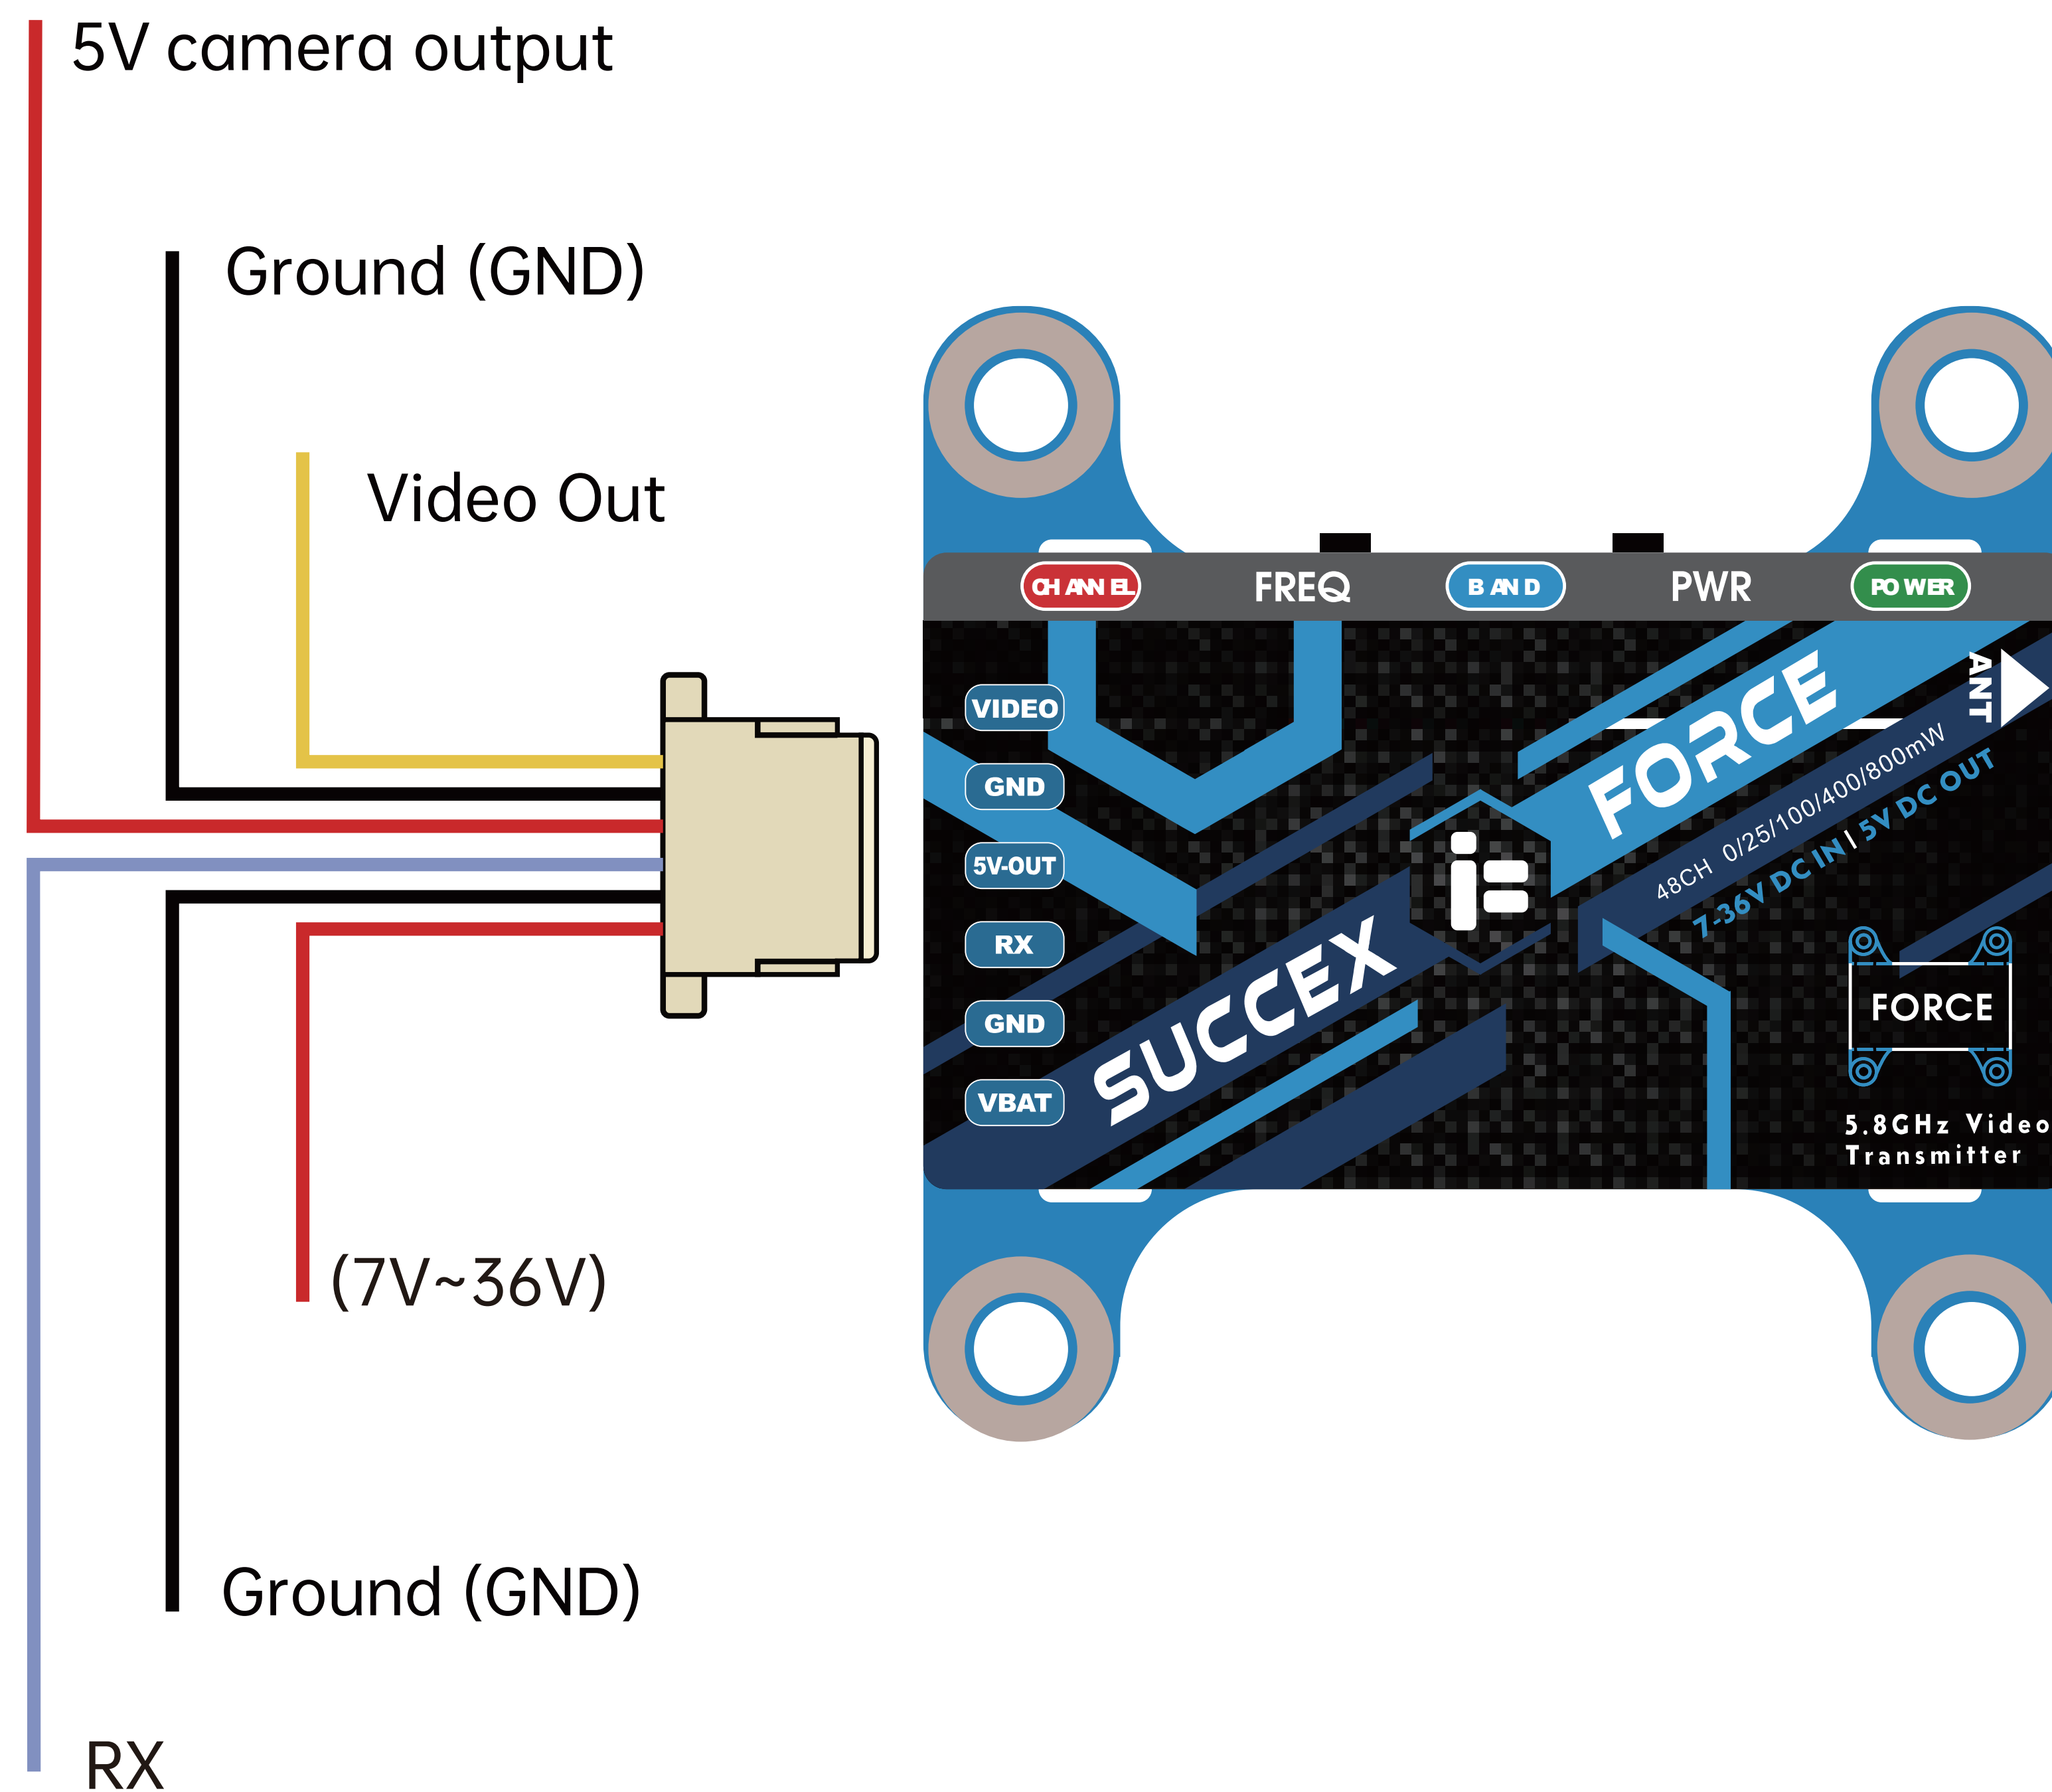

**5V Output only for FPV cameras!**

- ▲ The RX wire can be linked to any free UART TX on your Flight Control and setup for IRC Tramp VTX telemetry to change parameters of your VTX through your OSD.
- ▲ If you experience severe signal interference in your video feed please inspect your power source for electrical noise. Some common issues are too long motor screws, no additional capacitor added to your ESC, bad or noisy motors, bad or noisy ESC.

# Indicator LED and Buttons

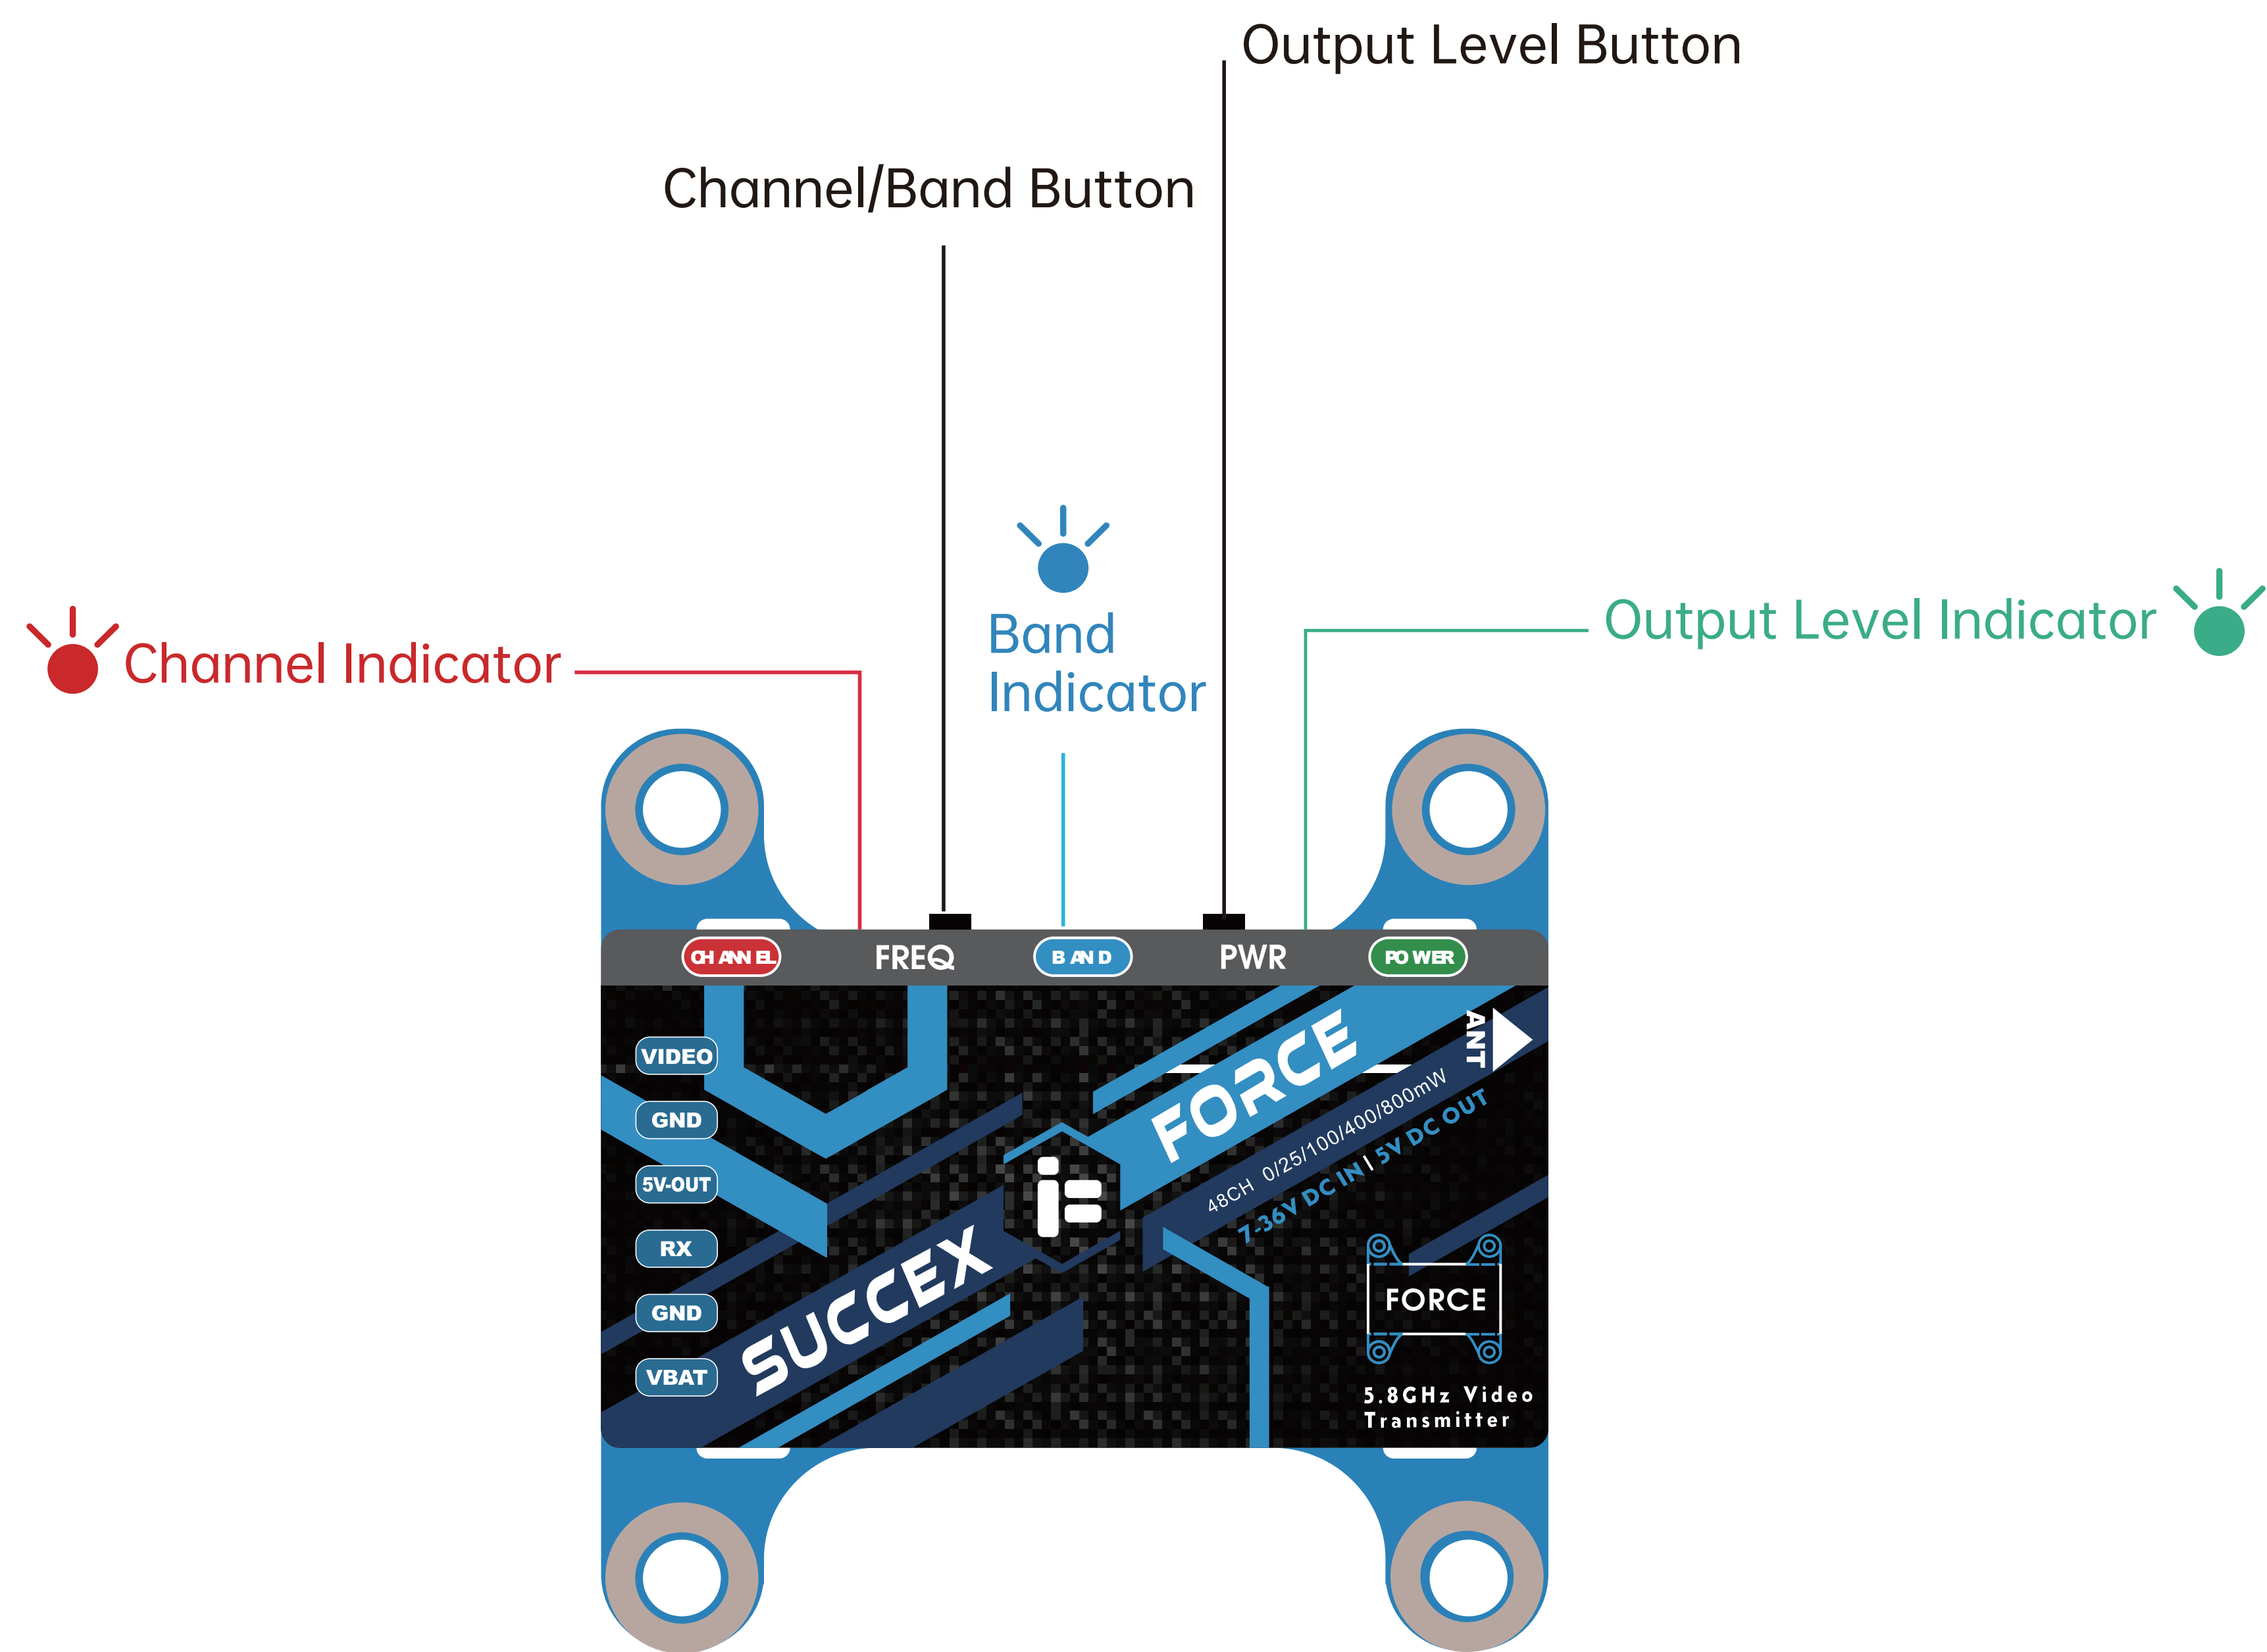

## Power Level Selection

Long Press for 2 seconds to select Power Level

Power	PIT	25mW	100mW	400mW	800mW
Green LED	light ON	Flash 1x	Flash 2x	Flash 3x	Flash 4x

## Band Selection

Long Press for 3 seconds to enter Band selection

Group	BAND A	BAND B	BAND E	BAND F	RaceBand
Blue LED	Flash 1x	Flash 2x	Flash 3x	Flash 4x	Flash 5x

## Channel Selection

Short Press to enter the Channel selection

Group	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Red LED	Flash 1x	Flash 2x	Flash 3x	Flash 4x	Flash 5x	Flash 6x	Flash 7x	Flash 8x

## RF Frequency Table

(BAND)	CHANNEL							
	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
A	5865MHz	5845MHz	5825MHz	5805MHz	5785MHz	5765MHz	5745MHz	5725MHz
B	5733MHz	5752MHz	5771MHz	5790MHz	5809MHz	5828MHz	5847MHz	5866MHz
E	5705MHz	5685MHz	5665MHz	5645MHz	5885MHz	5905MHz	5925MHz	5945MHz
F	5740MHz	5760MHz	5780MHz	5800MHz	5820MHz	5840MHz	5860MHz	5880MHz
R	5658MHz	5695MHz	5732MHz	5769MHz	5806MHz	5843MHz	5880MHz	5917MHz